Dave

INSTRUCTION MANUAL

DO NOT LOAN OUT

REFERENCE STD LAB

Sensitive Research*

VOLT-AMP-WATTMETERS

MODEL VAW

SINGER
INSTRUMENTATION

Precision electrical and electronic instruments for measurement

emc — EMPIRE* — Gertsch* — Panoramic* — Sensitive Research*

THE SINGER COMPANY • METRICS DIVISION

*A Trademark of THE SINGER COMPANY

WARRANTY

THE SINGER COMPANY, METRICS DIVISION, warrants each new instrument to be free from defects in material and workmanship, effective after delivery to the original purchaser as follows:

Sensitive Research Electrical Indicating Instruments.....2 years
Other Electrical and Electronic Measuring Instruments.....1 year

Repair or replacement (at our option) without charge (F.O.B. factory) will be effected when our examination satisfactorily indicates that defects are due to workmanship or materials. Electron tubes, semiconductors, batteries, fuses, lamps, thermoelements, and *RatioTran* potentiometers are excluded from warranty coverage. Warranty returns must first be authorized by the factory.

If the instrument or any portion thereof, has been abused, misused, damaged by accident or negligence, or if any serial number or seal has been removed or altered, the warranty is void.

This warranty is in lieu of all other obligations or liabilities expressed or implied and The Singer Company neither assumes, nor authorizes any person to assume for them, any other liability in connection with sales of instruments manufactured by The Singer Company, Metrics Division.

THE SINGER COMPANY • METRICS DIVISION
HOME OFFICE: 915 PEMBROKE STREET, BRIDGEPORT, CONNECTICUT

REPAIR AND MAINTENANCE

Instruments should be returned only on prior written authorization from the Singer Representative or the factory(1). Warranty repair will be made upon written request. Please provide the following information in order to expedite our processing of your instrument:

1. Model or Type
2. Serial Number
3. Description of trouble(2)
4. Test instruments used
5. Approximate date instrument was placed in operation
6. Approximate number of hours of use
7. Has maintenance action been previously requested?
8. Other comments

Upon receipt of this information our Service Department will send you service data or shipping instructions. Upon receipt of shipping instructions forward the instrument to the factory prepaid. If requested, an estimate of charges will be made before work begins.

(1) Contact Metrics Division, 915 Pembroke St., Bridgeport, Connecticut for *Empire*, *Panoramic*, and *Sensitive Research* instruments.
Contact Metrics Division, 3211 S. LaCienega Blvd., Los Angeles, California for *Gertsch* instruments.
Contact Metrics Division, 7338 Varna Ave., N. Hollywood, California for *EMC* instruments.

(2) Include data on symptoms, measurements taken, suspected location of trouble, maintenance action taken, and any other relevant data.

VOLT-AMP-WATTMETER

DESCRIPTION:

The VAW is a shielded electrodynamometer using internal switching with an instrument transformer, together with the necessary resistors, and switching to allow it to be used as a voltmeter, an ammeter or a wattmeter. The circuit is such that measurements of voltage across a load, current into a load and watts consumed by a load can be read directly WITHOUT CORRECTION for instrument losses.

The circuit is also so designed that, when used with the "AC Supply," common and "load" terminals only, no switching change will affect externally either the line or load side in changing from "Volts to Amps or to Watts." This eliminates any circuit readjustments when reading these separate values.

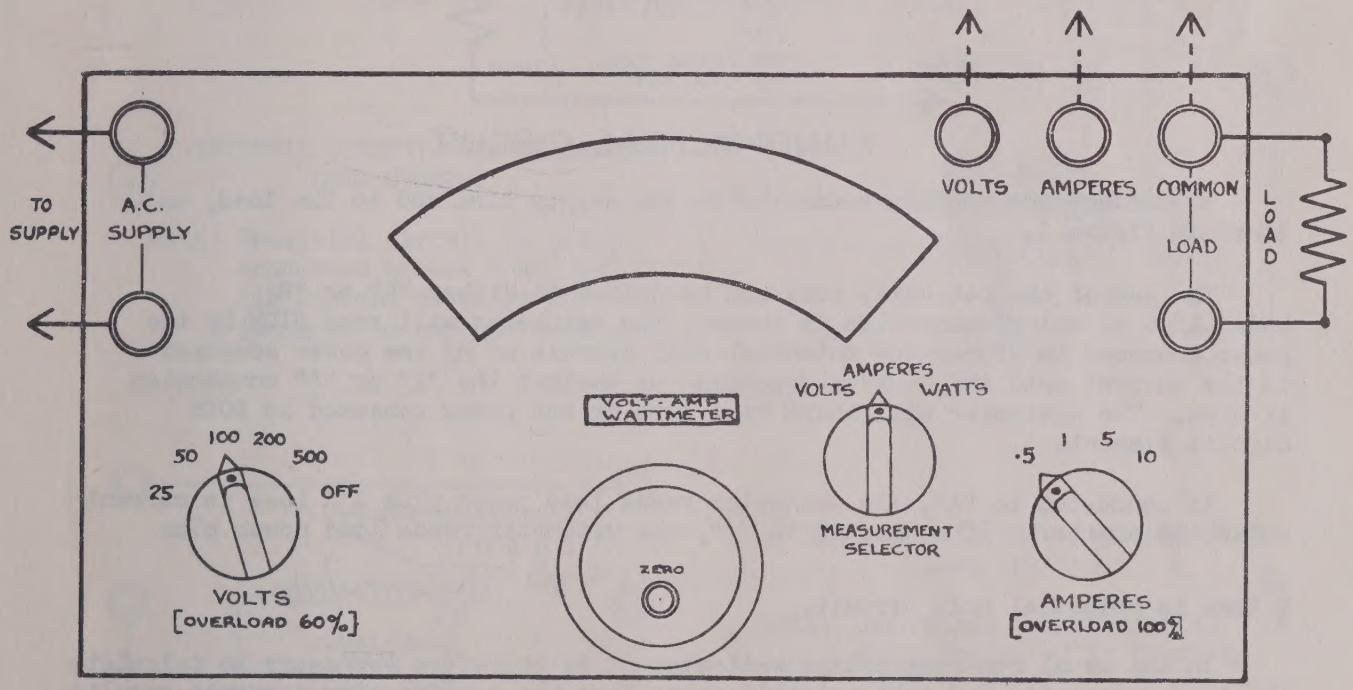

The VOLT-AMP-WATTMETER is completely compensated and NO calculations are necessary by the user. Compensation is accomplished by a special winding "A" on the internal current transformer which opposes the normal LOAD CURRENT flux by the current flowing in the potential circuit, This reduces the wattmeter reading by the amount of power lost in the potential circuit and therefore the VOLT-AMP-WATTMETER indicates true load WATTS.

All non-compensated wattmeters read high by the power consumed in the usual wattmeter potential circuit or the power lost in the current circuit, depending upon the connections used. See figure 1 below.

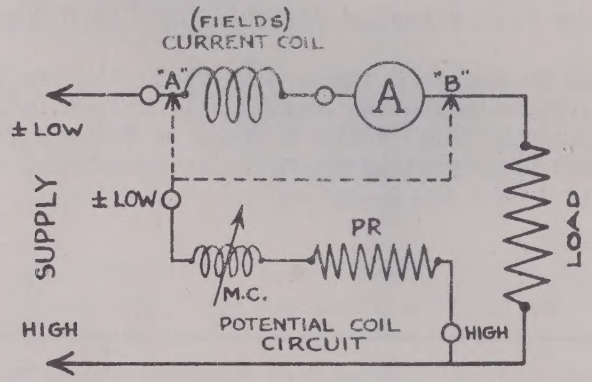

FUNDAMENTAL CIRCUIT

Wattmeters are usually connected to the supply line and to the load, as shown in figure 1.

The end of the potential coil can be joined to either "A" or "B." REGARDLESS of which connection is chosen, the wattmeter will read HIGH by the power consumed in either the potential coil circuit or by the power consumed in the current coil and ammeter-depending on whether the "A" or "B" connection is used. The wattmeter will NEVER read high by the power consumed in BOTH circuit elements.

If connected to "A", the wattmeter reads load power plus I^2R loss in current coils and ammeter. If connected to "B", the wattmeter reads load power plus

$\frac{E^2}{R}$ loss in potential coil circuit.

In the usual non-compensated wattmeter it is therefore necessary to calculate the losses in watts and subtract this value from the reading, for accurate results.

In our VOLT-AMP-WATTMETER we use the "B" connection and internally compensate for the potential circuit losses.

The internal instrument circuit is so designed that in measuring the VOLTS or AMPERES of the load being measured, the operation of the selector switch DOES NOT affect the load and supply circuits whatsoever. See figures 3,4, and 5.

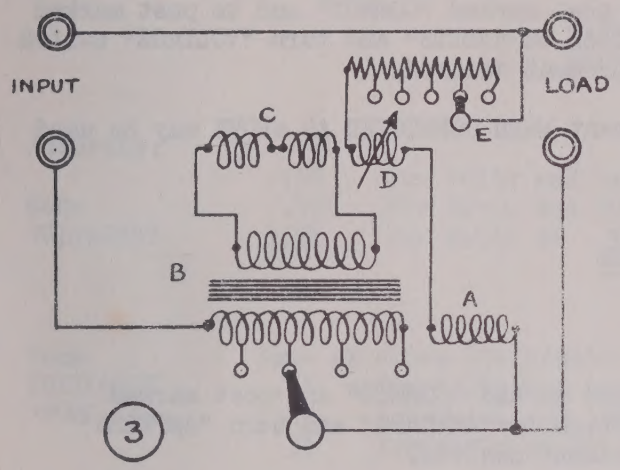

3

INTERNAL CIRCUIT WHEN MEASURING WATTS

A- Compensating Winding
B- Instrument Current Transformer
C- Dynamometer Field Coils
D- Dynamometer Moving Coil
E- Potential Circuit Resistances

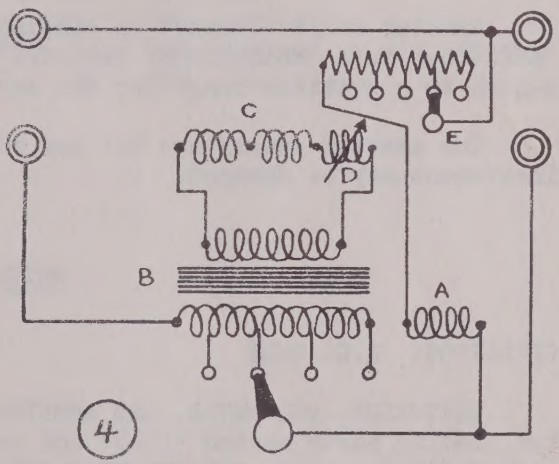

4

INTERNAL CIRCUIT WHEN MEASURING LOAD CURRENT

Note: Potential circuit is still connected across load, but its current drain is NOT included in ampere reading.

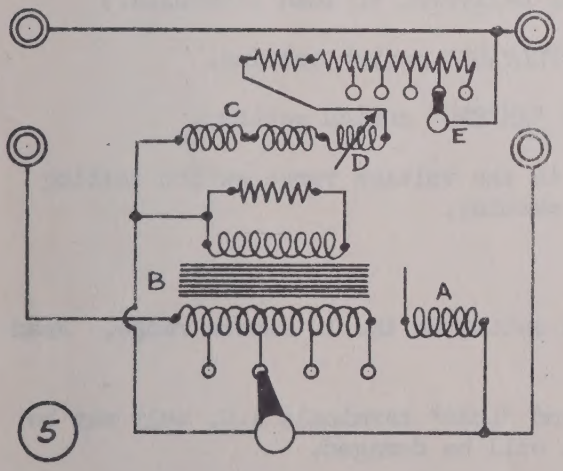

INTERNAL CIRCUIT WHEN MEASURING LOAD VOLTAGE

Note: Instrument transformer is still connected in Circuit.

5

All the above circuits are controlled by internal switching which action will not cause errors in any measurement.

VOLTMETER

OPERATION: A.C. OR D.C.

Voltmeter only: Connect to binding post marked "COMMON" and to post marked "VOLTS". Turn "MEASUREMENT SELECTOR" switch to "VOLTS" and turn "VOLTAGE" switch to a suitable Voltage range for the measurement desired.

The voltmeter ranges of this instrument WHEN CONNECTED AS ABOVE may be used on D.C. as well as on A.C.

AMMETER

OPERATION: A.C. CURRENT ONLY

Ammeter only: Connect to binding post marked "COMMON" and post marked "AMPERES." Turn "MEASUREMENT SELECTOR" switch to "AMPERES" and turn "AMPERES" switch to a suitable range for the measurement desired.

The ammeter ranges are for use on A.C. only. Do not use on D.C. or instrument may be damaged.

WATTMETER

OPERATION: A.C. ONLY

WATTMETER, VOLTMETER, and AMMETER: Connect the load being measured to the two binding posts marked "LOAD" and connect the power source to the two terminals marked "AC Supply." "MEASUREMENT SELECTOR" switch can now be turned to measure "VOLTS" (Voltage applied to the load terminals,) "AMPERES" (Current being drawn from load terminals) or "WATTS" (power being delivered to load terminals.)

Read VOLTS on the scale indicated by "VOLTAGE" switch setting.

Read AMPERES on the scale indicated by "AMPERE" switch setting.

Read WATTS on the scale corresponding to the voltage range switch setting multiplied by the ampere range switch setting.

EXAMPLE:

Volt switch on 100 Volt range. Ampere switch on the 10 ampere range. Read watts on the 1000 watt scale (100 x 10.)

For this operation using "AC Supply" and "Load" terminals A.C. only may be used. Do not operate on D.C. or instrument will be damaged.

All of the above measurements can be completed in a very few moments without changing any connections nor does the load on the power supply change for any range or for any position of the V.A.W. switch.

The power factor of the load can be readily calculated by

$$P.F. = \frac{\text{Watts Reading}}{\text{Volts x Amperes}}$$

Accuracy:

	.5%	for Volts and Amperes	50-133 Cycles
Code	.75%	for Watts and 100% P.F.	50-133 Cycles
VOLTAWATT	1.5%	for Watts at 50% P.F.	50-133 Cycles

Code	Same as above (VOLTAWATT) plus the following.		
VOLTOWATT	.5%	for Volts and Amperes to	800 Cycles
only	1.5%	for Watts and 100% P.F. to	800 Cycles
	3%	for Watts at 50% P.F. to	800 Cycles

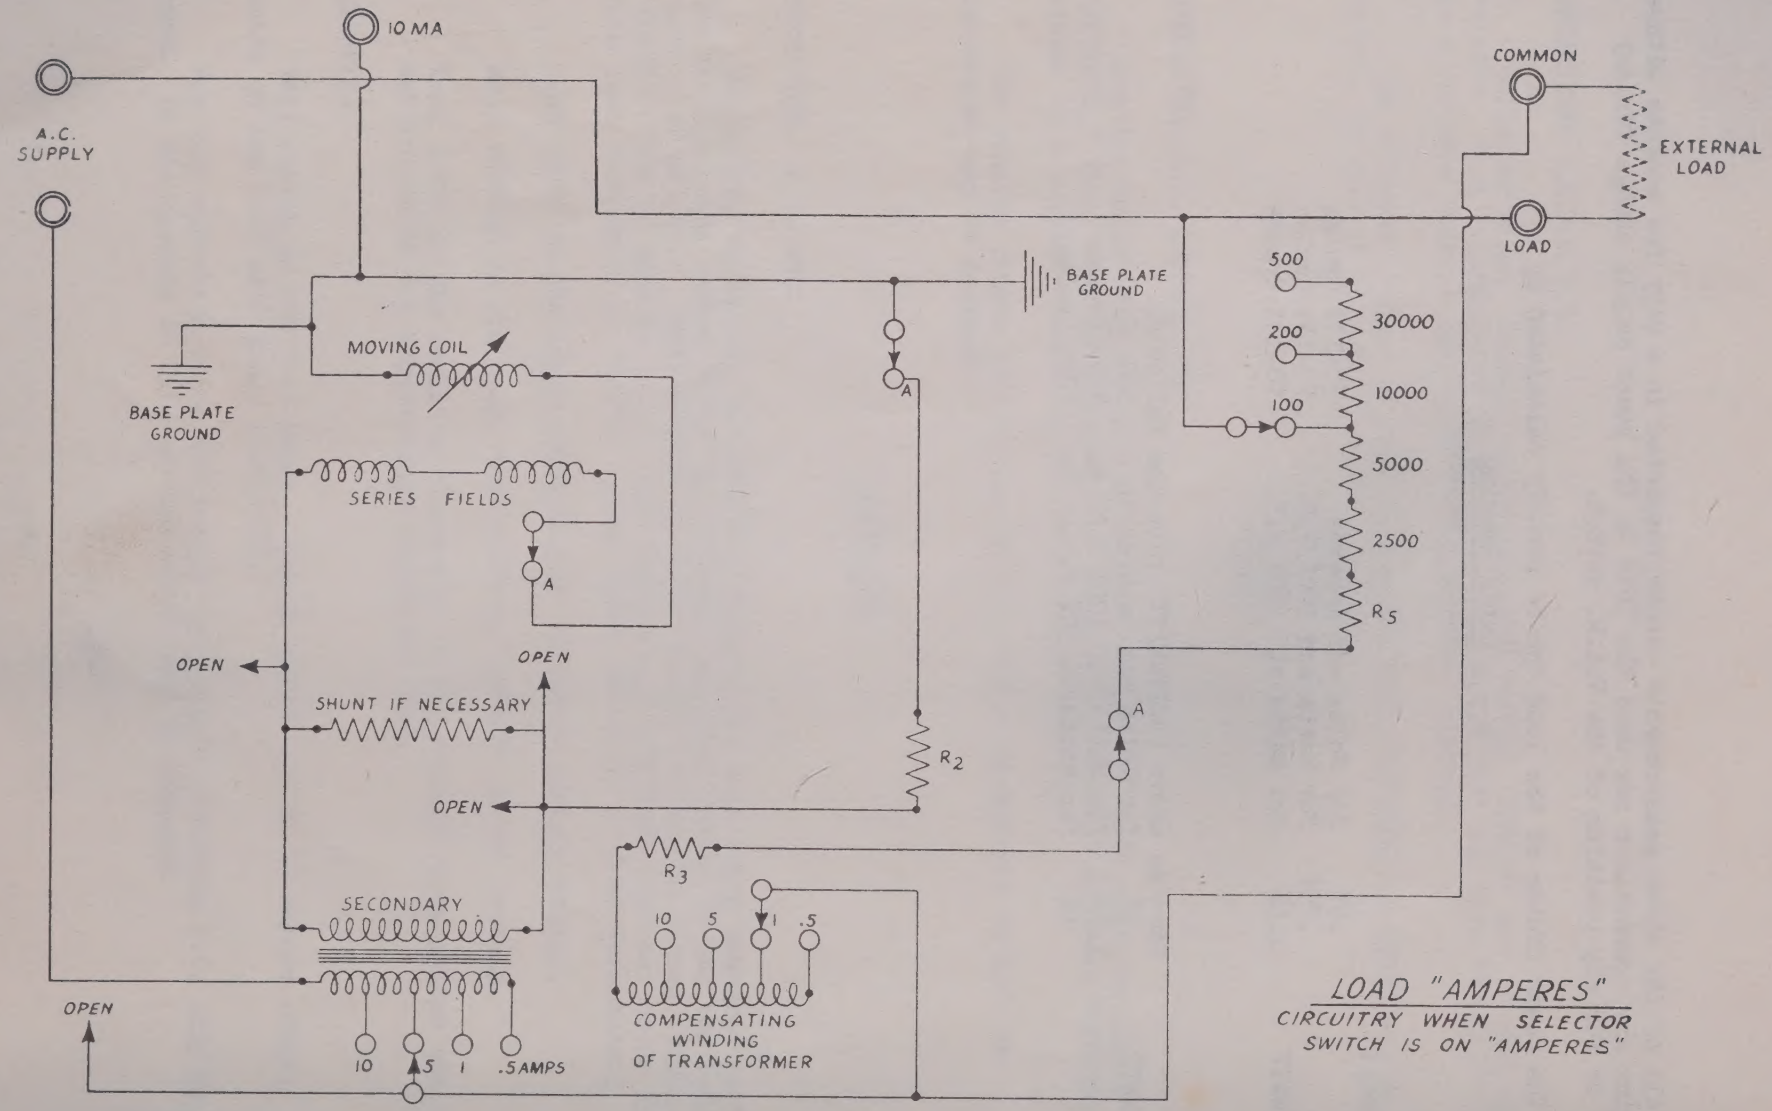

LOAD "AMPERES"
CIRCUITRY WHEN SELECTOR SWITCH IS ON "AMPERES"

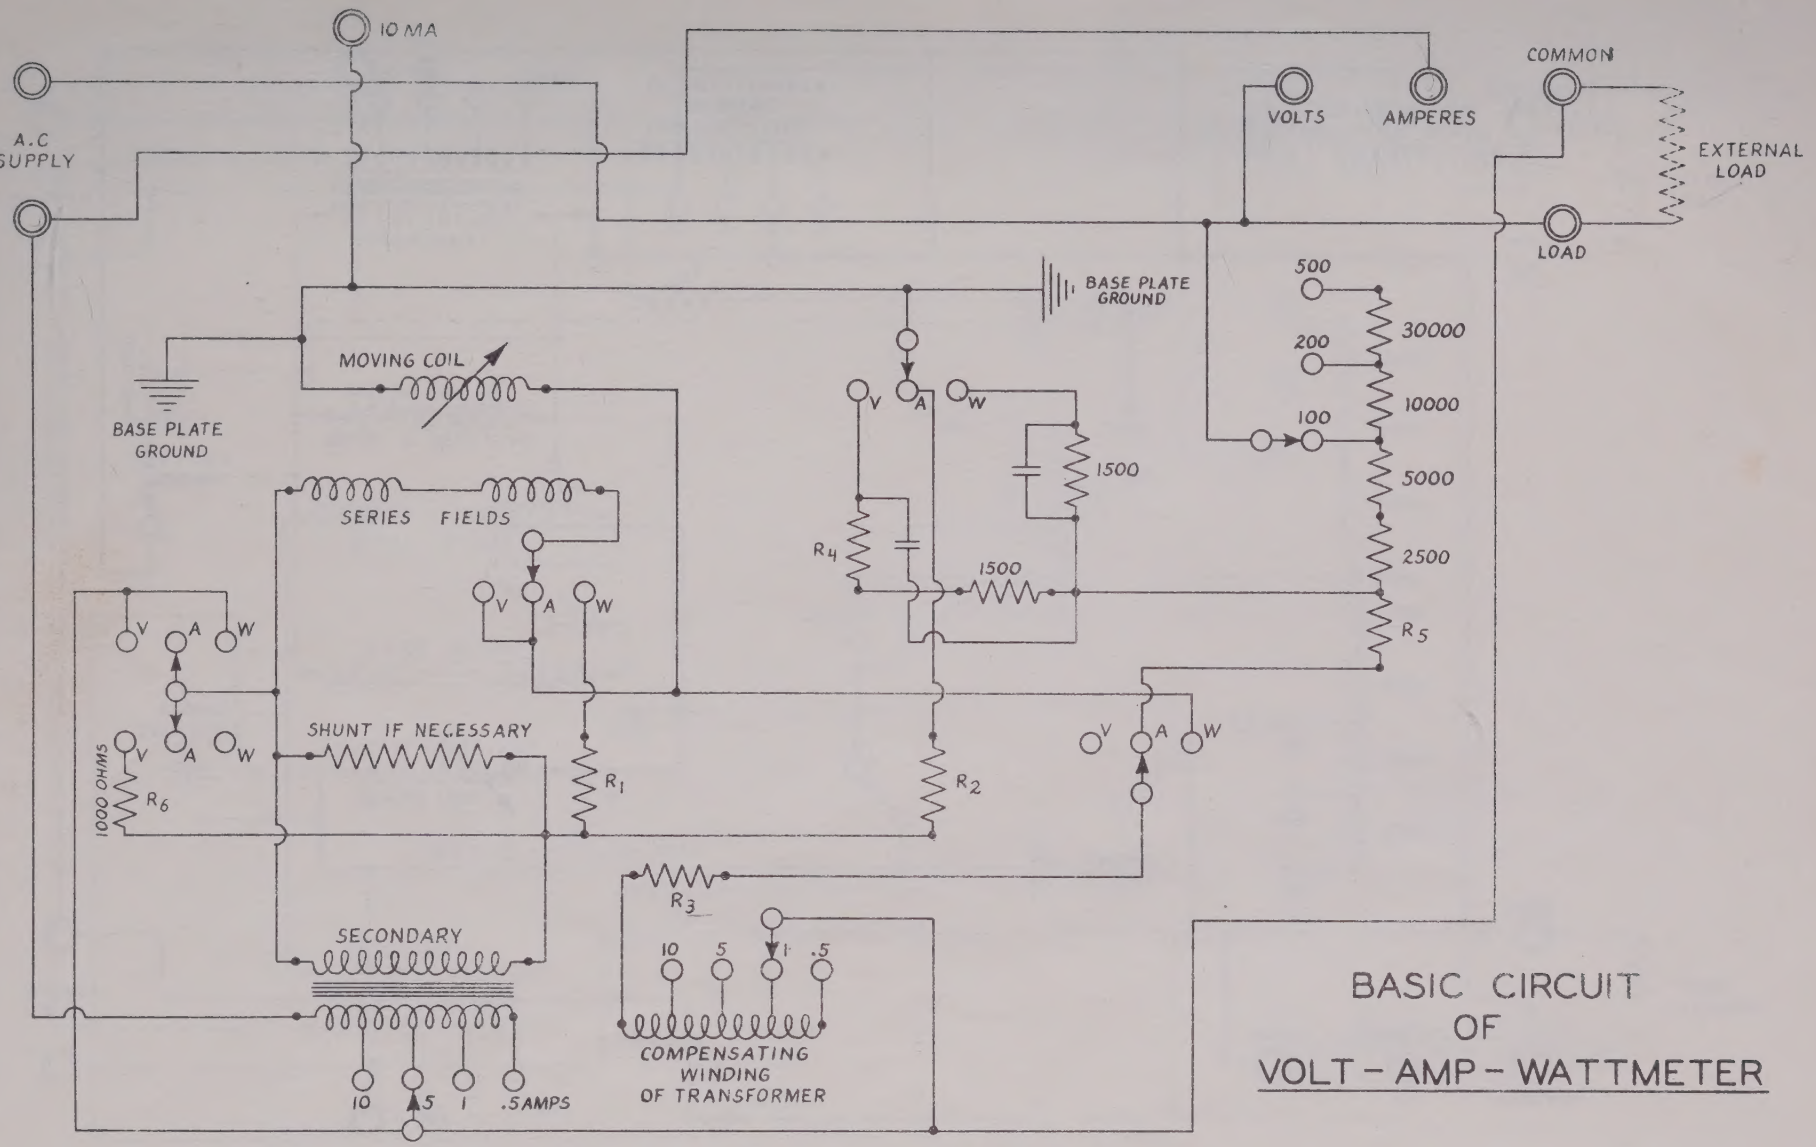

BASIC CIRCUIT OF VOLT - AMP - WATTMETER

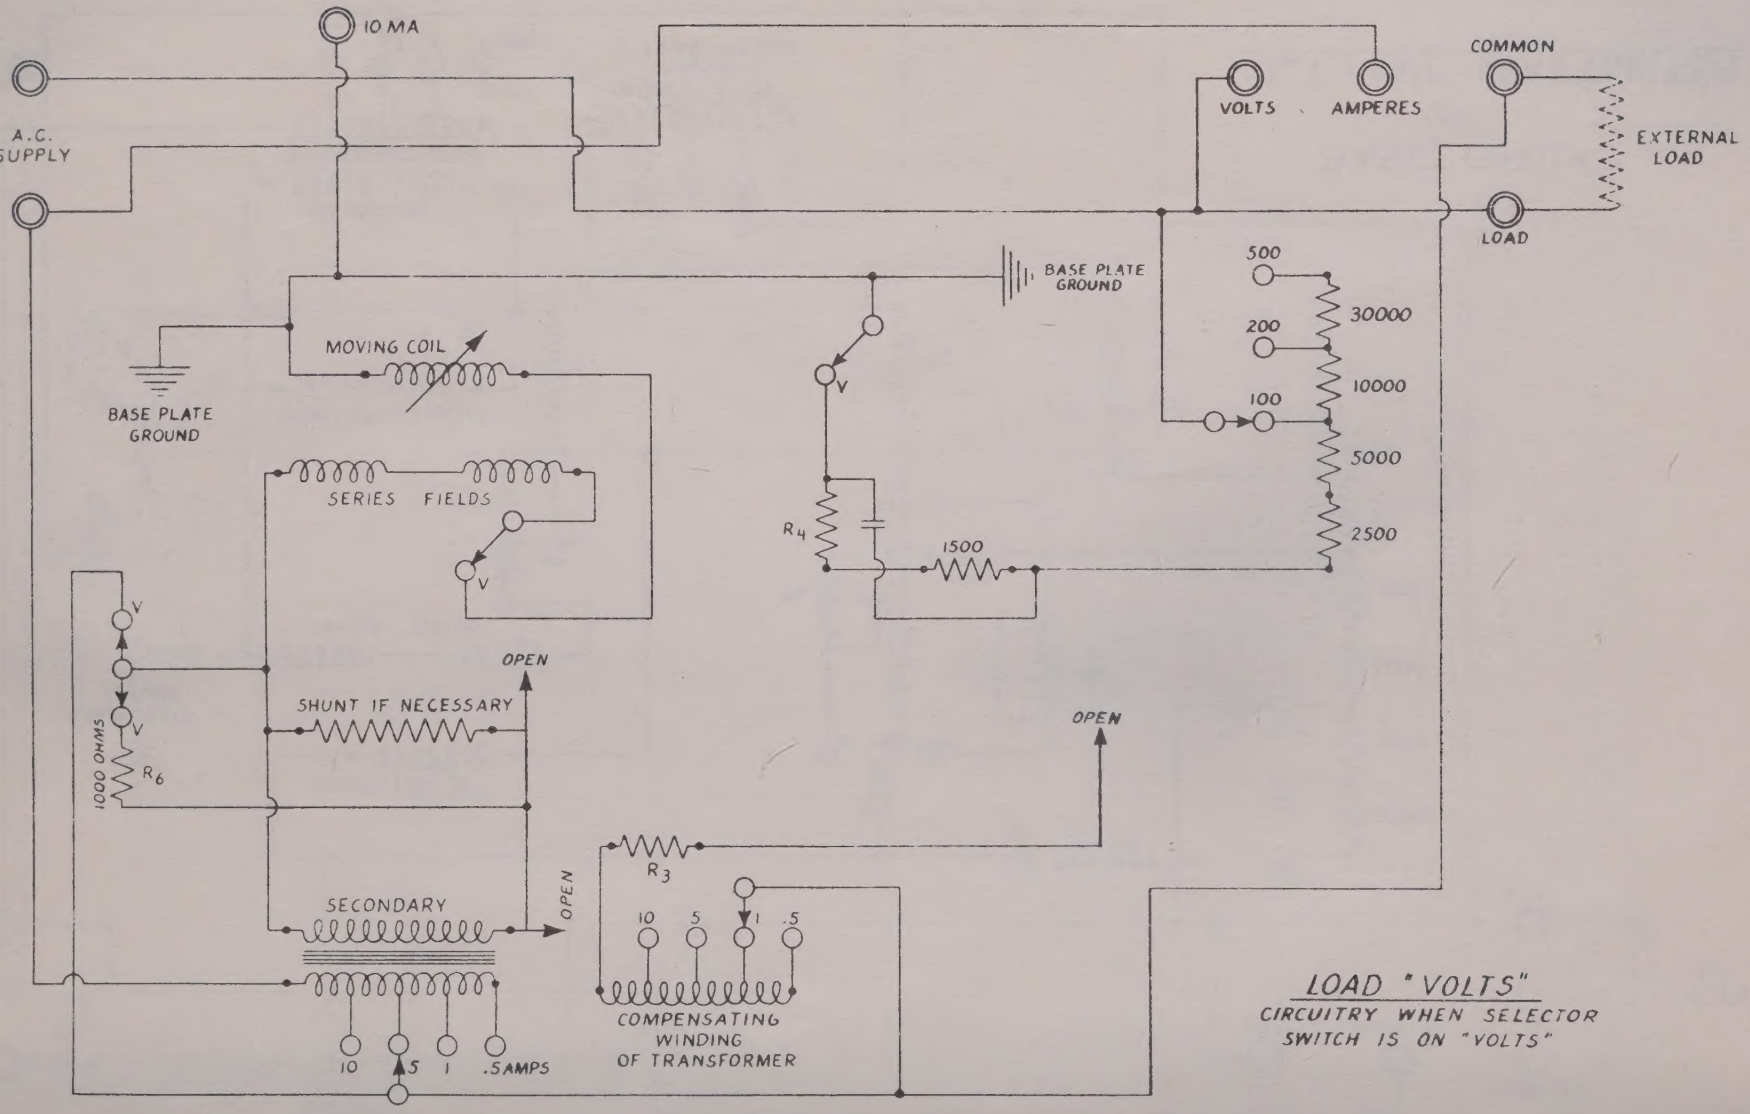

LOAD "VOLTS"
CIRCUITRY WHEN SELECTOR SWITCH IS ON "VOLTS"

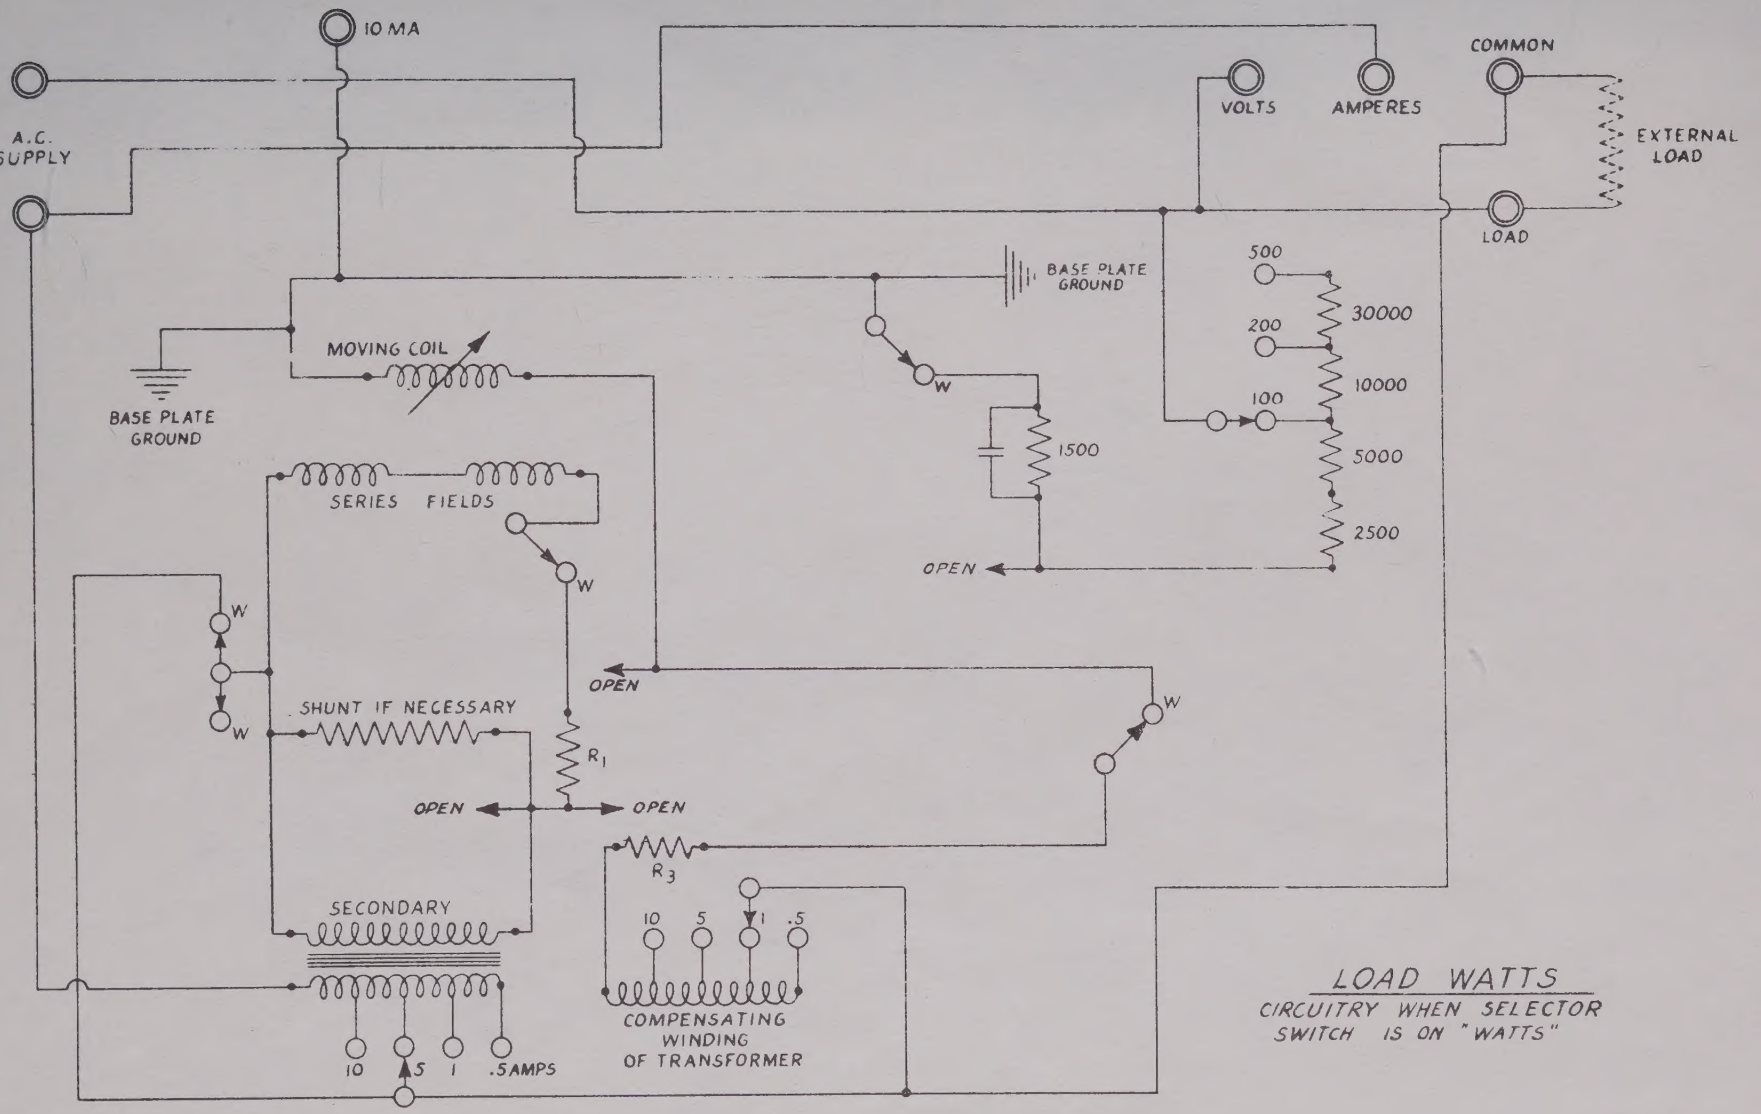

LOAD WATTS

CIRCUITRY WHEN SELECTOR SWITCH IS ON "WATTS"